Slide-a-Key


Musical Transposer

~ Cricut Print Then Cut Kit ~ cut it, slide it, spin it, play it


Let your Cricut do the cutting for the Pocket Edition and the add-ons. Design Space sends each piece, with its sensor marks, to your own printer (inkjet or laser). The Cricut then reads the marks and cuts around each piece, including any windows and centre holes.

TYPE THE SIZES IN!
CHECK THE UNITS: CM OR INCHES.


What's in the kit

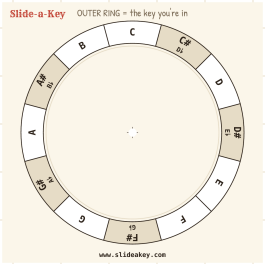


Pocket base card
9.88 × 9.88 cm
3.89 × 3.89 in
slide-a-key-pocket-transposer-base.png

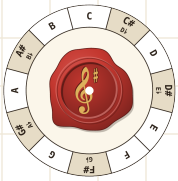

Pocket top disk
6.52 × 6.52 cm
2.57 × 2.57 in
slide-a-key-pocket-transposer-disk.png

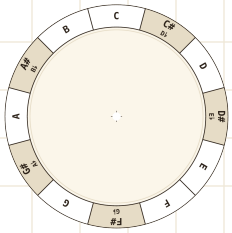

Pocket outer ring
8.49 × 8.49 cm
3.34 × 3.34 in
slide-a-key-pocket-transposer-ring.png
optional extra

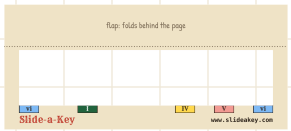

Chord Family Classic
10.76 × 4.73 cm
4.24 × 1.86 in
slide-a-key-classic-chord-family-add-on.png
optional add-on



Chord Family Pocket
4.73 × 4.73 cm
1.86 × 1.86 in
slide-a-key-pocket-chord-family-add-on.png
optional add-on

Each piece's size is given as width × height, first in centimetres, then in inches.

Step by step

1. In Design Space, choose Upload, then Upload Image, and pick a PNG. Save it as a Print Then Cut image. The background is already clear, so Design Space finds the cut line for you.
2. Add it to the canvas. With the size lock closed, type in the width shown under the piece above (centimetres or inches). Check that the height matches too.
3. Click Make It and turn on Add bleed. Send it to your printer at 100% scale (no "fit to page") on matte paper or light cardstock.
4. Put the printed sheet on a LightGrip mat, choose Light Cardstock (or your paper) and let the machine cut.
5. Put it together as shown on its sheet at slideakey.com. You'll also need a brass fastener for the Pocket.

Good to know

Print through Design Space. It adds the marks the Cricut needs to find the pieces, so they can't be printed any other way first.

Marks go on the front. Design Space adds black sensor marks around the pieces.

Matte is best. Glossy paper or shiny laser toner can stop the sensor reading the marks.

Centre holes. The Pocket pieces and the Chord Family Pocket come with a 3 mm hole for the fastener.

Outer ring. Optional: under the top disk, it lets the song's key turn to the top.

Folds. The Chord Family Classic's fold line is printed. Fold by hand, or score it first.

Cuts a little off? Run Print Then Cut Calibration once from the Design Space menu.

Save the project. Next time, just press Make It.

Thank you for choosing Slide-a-Key!

Free to print and share. Please don't sell.

www.slideakey.com

v0.0 · October 2026